Stageplan

Artists

A1 = Lead Vocal
A2 = Bass & Backing Voc
A3 = Keyb & Backing Voc
A4 = Guit
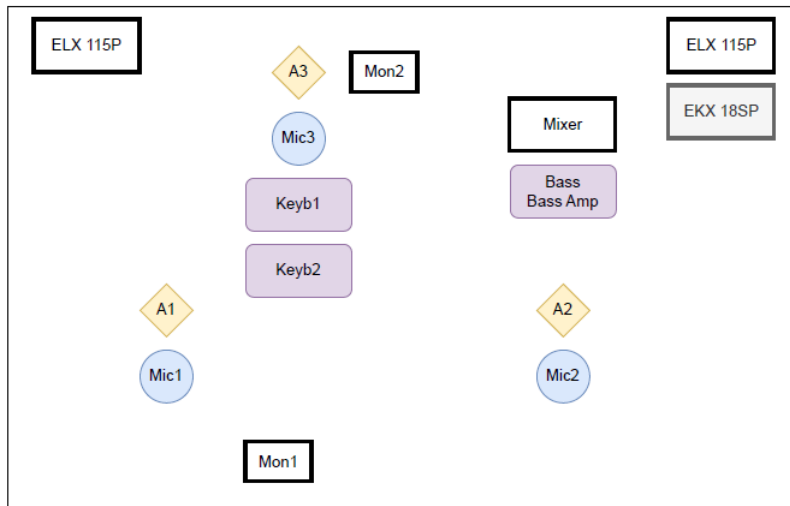A5 = Drums

Mic	Instrument	PA	Artist	
				Vocal
				Instrument Mic
				Instrument Line
				Wireless
				Optional
				Club Installation

Quartett (backline)

Stage Front

Quintett (backline)

Stage Front

Trio (own PA)

ELX 115P

A3 Mon2

ELX 115P

EKX 18SP

Mic3

Mixer

Keyb1

Bass
Bass Amp

Keyb2

A1

A2

Mic1

Mic2
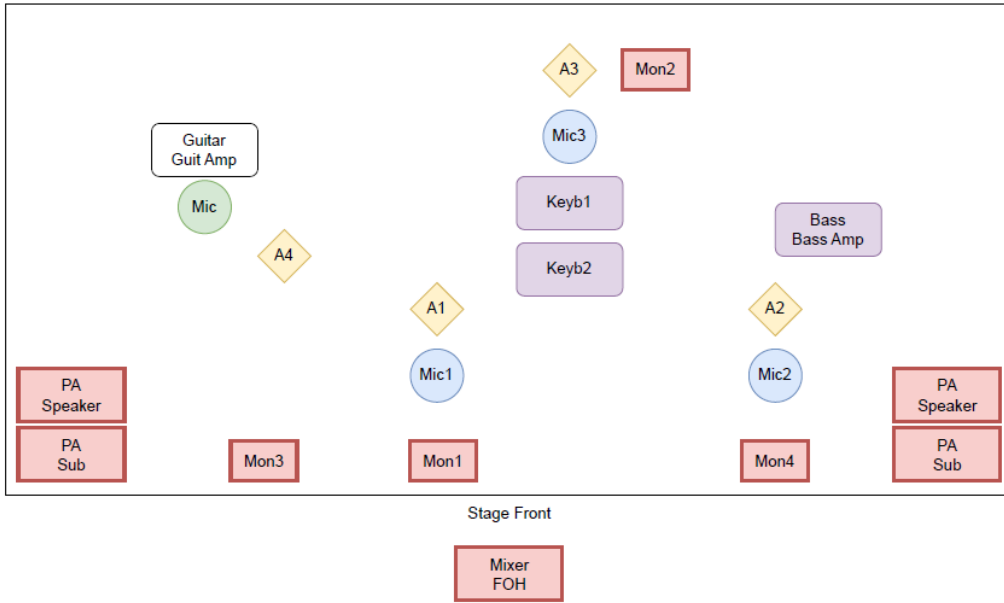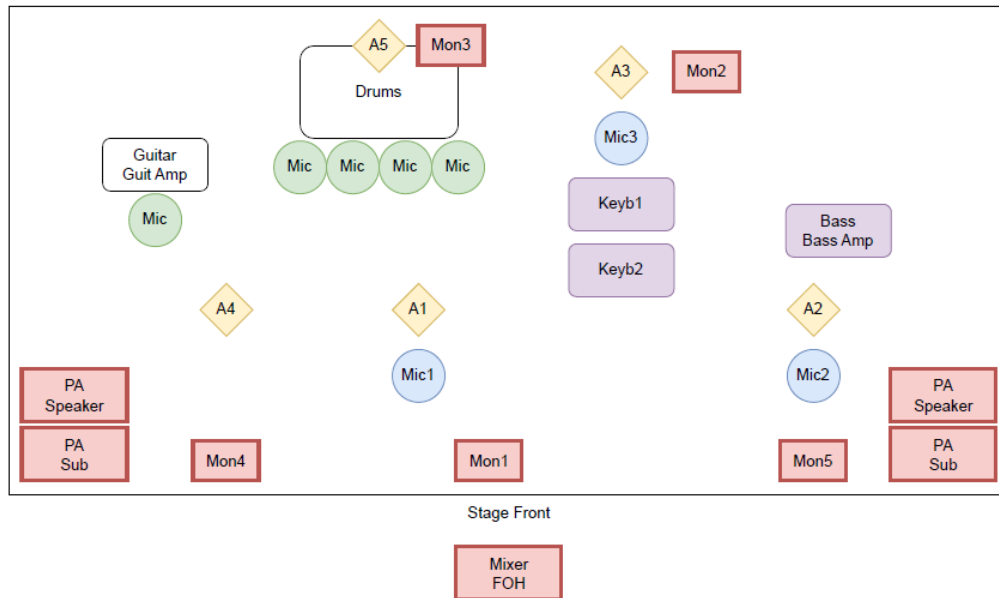
Mon1

Stage Front

Quartett (own PA)

ELX 115P

A3 Mon2

ELX 115P

EKX 18SP

Mixer

Mic3

Guitar
Guit Amp

Keyb1

Bass
Bass Amp

Mic

Keyb2

A4

A1

A2

Mic1

Mic2

Mon1

Stage Front

Quintett (own PA)

ELX 115P

A5 Mon3

A3 Mon2

ELX 115P

EKX 18SP

Drums

Mic3

Mixer

Guitar
Guit Amp

Mic Mic Mic Mic

Keyb1

Bass
Bass Amp

Mic

Keyb2

A4

A1

A2
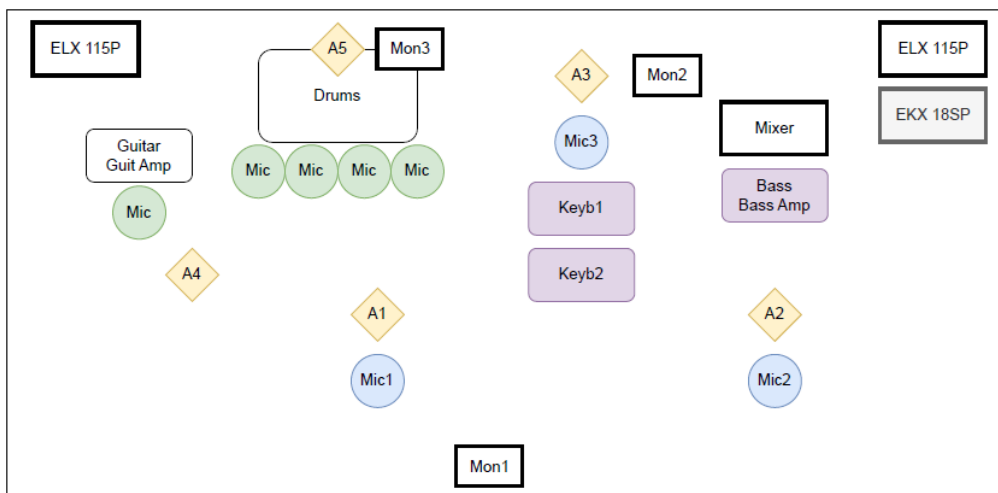
Mic1

Mic2

Mon1

Stage Front

Technical Rider

Monitoring

Mon1 = (Lead Vocal) & (…) & (…)
Mon2 = (keyb) Left-Channel Mono Only & (…) & (…)
Mon3 = (…) & (…)
Mon4 = (…) & (…)
Mon5 = (…) & (…)

Inputs	Discription	Channels	Level	Phantompower	Balanced	Comment
Mic1	Lead Vocal	1	Mic	No	Yes	Shure Beta 58A
Mic2	Background Vocal Bass	1	Mic	No	Yes	Shure SM58
Mic3	Background Vocal Keyb	1	Mic	No	Yes	Shure SM58
Keyb1	Clavia Nord Stage	2	Line	No	No	Stereo
Keyb2	Korg Wavestate	2	Line	No	No	Stereo
Guit		1	Mic	No	Yes	Shure SM57
Bass		1	Line	No	Yes	DI Out
Drums (Bass)		1	Mic	No	Yes	Audix D6 -No-
Drums (Snare)		1	Mic	No	Yes	Audix i5 -No-
Drums (OH)		2	Mic	Yes	Yes	Audix ADX51 (2 Stk.) overhead -No-

Mon1 = (Lead Vocal) & (…) & (…)
Mon2 = (keyb) Left-Channel Mono Only & (…) & (…)
Mon3 = (…) & (…)
Mon4 = (…) & (…)
Mon5 = (…) & (…)